

IMPORTANT

Installation Guide for TYN-200, TYN-201 & TYN-204

Keep this guide for future reference.

For Drivers/Manuals {adobe acrobat reader req} & further support visit www.tongya.com.tw/support.htm

Drivers should not be necessary for Windows XP and 2000 users however if you use 98 or ME you may require them.

Primarily they activate the keypad on your TYN-201 USB phone which is not required to use the SKYPE communication system and allow you to make free calls.

Firstly ensure the USB phone is connected to a free usb port ideally not a non powered hub, then when you have achieved a constant red light on the handset your drivers should be loaded.

You will need to generate a username to access the system which can be easily done once you have loaded the Skype software onto your computer and making sure you have a internet connection established. When installing your USB Phone for use with the Skype programme make sure you set the handset/headset option to usb audio device both for Audio In and Audio Out and let your sound card act as your ringing device.

Note: If you do not have a sound card the program can use your pc speaker as the ringing device. To find this setting go to file then options then handsets/headsets within the Skype program.

Warning if you remove your usb phone you may have to reset the above settings.

To get the Skype communication software go to www.skype.com and get a free download of the program from there. { approx 6.62 megabytes }

User guide for skype is available at www.skype.com/help_userguide.html

Keypad functionality can be used with PCVoiz which is PC to phone communication software.

Which **does make charges** for its service to download this software please go to www.tongya.com.tw/support.htm and download PCVoiz PC-to-Phone Dialer (for TYN-201)

You will need to generate an account and then input you account details and pin number,

Applies to PCVoiz only

Go to menu within the audio tuning wizard and set audio recording and audio playback to usb audio device.

Warning these settings can change the settings within your windows system so you may have to set your default sound device back to your sound card i.e: SB Live! If you wish to use your pc speakers.

To do this go to control panel then sounds then audio then audio tab and choose default device.

And finally enjoy your new phone.

Please note: No responsibility is accepted for the use of the above software.